


INSTRUCTIONS TO ATTACH T-SHIRT SIDE STATION

BE SURE THE ALIGNMENT
BEARINGS ARE TIGHT
AGAINST THE ALIGNMENT
TAB ON THE PRINT ARM

USE THE TWO BOLTS
PROVIDED TO SECURE
SIDE ARM TO THE PRINTER

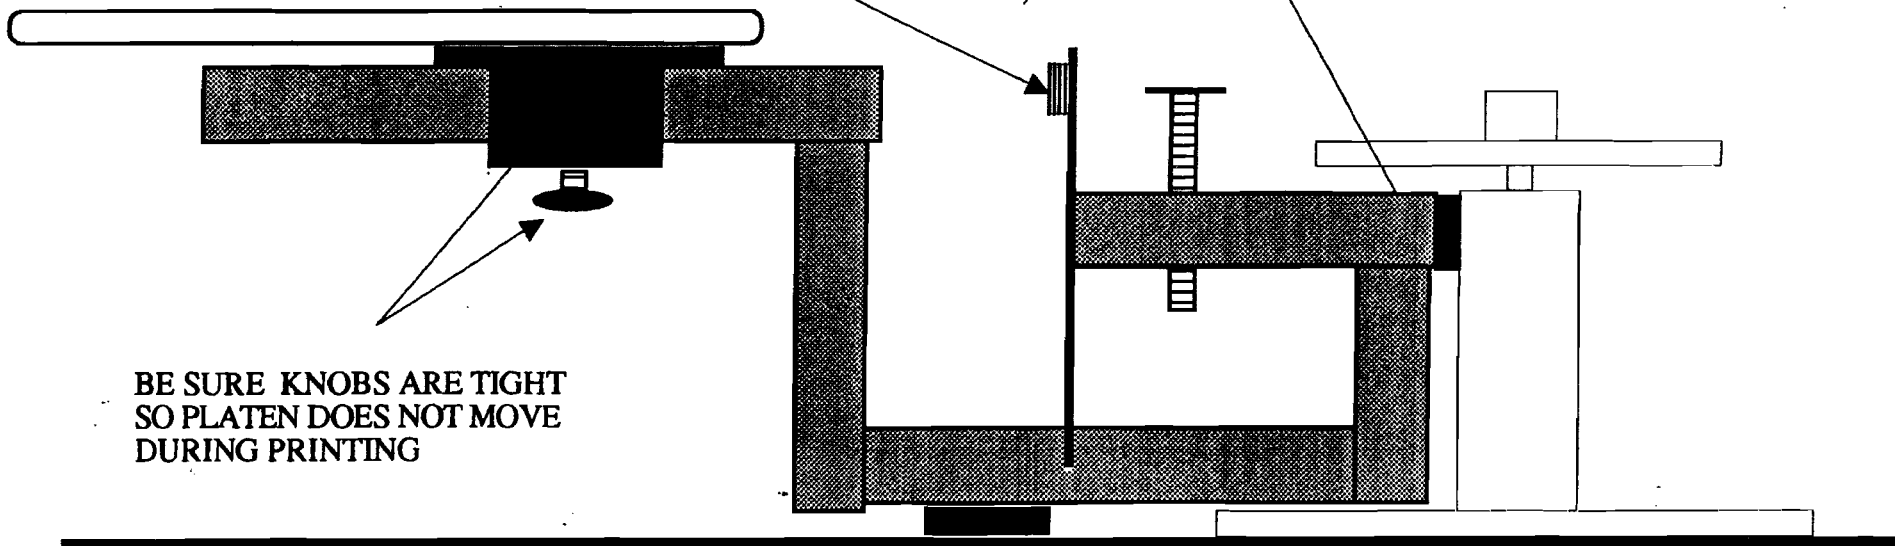

BE SURE KNOBS ARE TIGHT
SO PLATEN DOES NOT MOVE
DURING PRINTING

A GOOD SOLID SURFACE WILL PREVENT
ANY MOVEMENT OF THE SIDE STATION